

| Vehicle Identif Number | Series | Recall Text |
|------------------------|--------|--|
| WBADL82020CA99388 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN12060BM10132 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22000GE69706 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22000GE69740 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22000GE69883 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22000GE69978 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22000GE69981 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22000GE69995 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22000GE70015 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22000GE70063 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE69665 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE69701 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE69763 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE69777 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE69794 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE69813 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE69830 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE69875 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE70038 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE70041 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE70086 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE70119 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22010GE70122 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22020GE69707 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22020GE69710 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22020GE69738 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22020GE69769 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22020GE69819 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22020GE69982 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22020GE70064 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE69683 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE69702 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE69716 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE69747 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE69778 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE69957 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE69960 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE69988 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE70011 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22030GE70087 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69689 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69692 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69708 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69711 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69742 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69773 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69787 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69790 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69918 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69952 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE69983 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE70034 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE70048 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22040GE70051 | E39 | Checking the driver's airbag, replacing if necessary |
| WBADN22050GE69720 | E39 | Checking the driver's airbag, replacing if necessary |

| | | |
|-------------------|-----|--|
| WBAFB320X0LN87287 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN87421 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN87435 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN87452 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN87936 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN88052 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN88083 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN88097 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN88391 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN88441 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN88908 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN89184 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB320X0LN89279 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB52020LT79013 | E53 | Checking the driver's airbag, replacing if necessary |
| WBAFB52040LT79014 | E53 | Checking the driver's airbag, replacing if necessary |
| WBSDE92000BJ11441 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92000BJ11701 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92010BJ11285 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92020BJ11330 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92040BJ11281 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92050BJ11564 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92060BJ11329 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92060BJ11671 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92060BJ11833 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92060BJ11878 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92080BJ11672 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92090BJ11454 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92090BJ11728 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE92090BJ11812 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE920X0BJ11320 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE920X0BJ11771 | E39 | Checking the driver's airbag, replacing if necessary |
| WBSDE920X0BJ11950 | E39 | Checking the driver's airbag, replacing if necessary |