


Product Safety Recall

YOKE ACD REGULATORS

Aqua Lung Regulators with a serial number lower than H043301, Yoke only with the ACD feature that have not had an annual or other service. This includes Legend, Core & Titan LX models

Defect: Shutter valve in the ACD assembly not being tightened to the recommended torque setting. The shutter valve may work loose from the yoke retainer while trying to remove the first stage from a cylinder. When the shutter valve is unscrewed enough, it can disrupt the gas flow from the cylinder valve.

Products affected: Aqua Lung Regulators with a serial number lower than H043301. Yoke only models of the Legend ACD, Core ACD & Titan LX ACD that have not had an annual or other service.

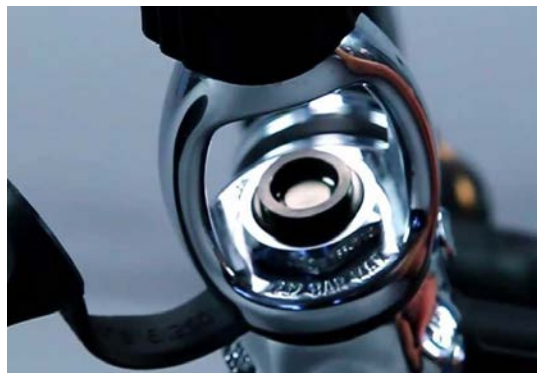

Hazard: The defect can lead to loss of breathing gas, which may result in severe injury or death.

What to do: Consumers should immediately stop using their ACD Regulator and take it in to the nearest Authorised Aqua Lung retailer or Dive Centre who will check the regulator is in good working order.

NOTE: If your regulator has had an annual or other service from an authorised technician since your date of purchase, the ACD assembly would have received a service during this time and would be torqued to the correct specifications as per the service manual.

Contact details: You can contact Aqua Lung on +61 3 9369 1992 or email us salesaqz@aqualung.com, go to <http://www.aqualung.com/au/find-a-store> for your nearest dealer

**See www.recalls.gov.au for
Australian Product Recall Information**