

# SAFETY RECALL NOTICE

## QUICK-RELEASE LEVERS

**Hazard:** Front-wheel quick-release cam levers that are improperly adjusted or left open during riding and do not meet the #2 Pencil Test below may potentially interfere with the front disc brake rotor, which could result in the rider losing control and sustaining serious personal injuries.

This is a Safety Recall Notice regarding all Model Year 2002 – 2015 Specialized bicycles equipped with front-wheel quick-releases and disc brakes where the space between the leading edge of the cam lever in its most open position and the disc brake rotor is less than 6 millimeters which is the equivalent of the width of a standard #2 pencil (the “#2 Pencil Test”). Please visit [www.quickrelease.com](http://www.quickrelease.com) for a visual demonstration of the #2 Pencil Test.

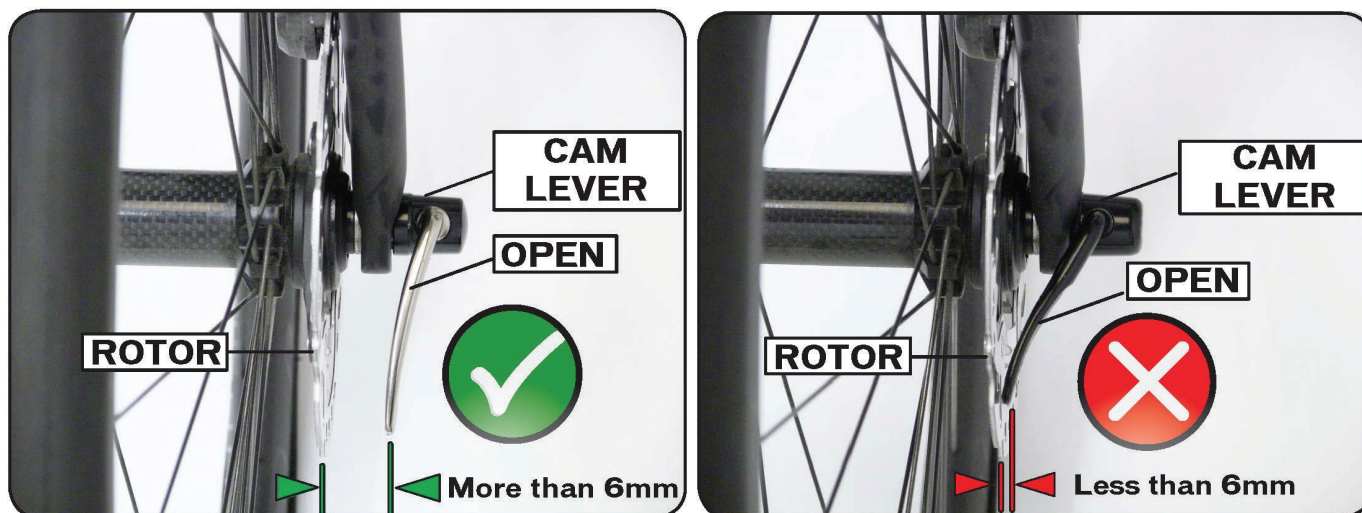


Fig1: Quick Release not affected by this recall

Fig2: Quick Release affected by this recall

**Remedy:** Stop riding the affected bicycle immediately and bring it to an Authorized Specialized Retailer, which will replace the affected quick-release free of charge. For any inquiries, see your local Authorized Specialized Retailer or contact Specialized Rider Care at:

**1300-499-330**

or online at [www.specialized.com/au](http://www.specialized.com/au)

Specialized Australia

# SAFETY RECALL NOTICE